Japan est1951

MK-X50A

True Wireless Earphones

Designed in Japan
アイワ株式会社

BT Wireless Guidelines

This Bluetooth device has an approximate range of 10 meters (30ft).

Please note that physical obstacles or other electronic devices might interfere with the signal transmission efficiency.

Product overview

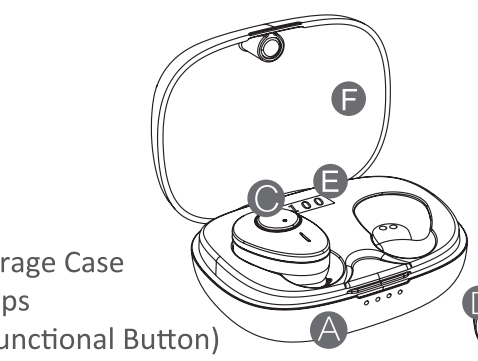

A. Charging/ Storage Case
B. Silicone Ear Tips
C. MFB (Multi- functional Button)
D. Earbuds Main Body MK-X50A
E. Battery Percentage Indicator Lights
F. Charging Case Cover

Charging

1. Charging case: Connect charging case to a power plug/ source (5V/300mA).

Blinking red lights (on charging case) indicates charging in progress
Lights will turn off upon full charge

2. Charging case with earbuds: Earbuds will be charged simultaneously with charging case once charging case has been plugged to a power source (5V/300mA).

Blinking red lights (on charging case) indicates charging in progress
Solid red lights (on earbuds) indicates charging in progress
Lights will turn off upon full charge

※Warning: Rechargeable batteries must be disposed properly. Please contact your local disposal/ recycling center for proper disposal. Do not expose the batteries to fire.

Specifications

BT Version: ---------- V5.0
Transmission Distance: ---------- 10M
Frequency Response: ---------- 20-20KHz
Output Sensitivity: ---------- 95±3dB
MIC Sensitivity: ---------- -42±3dB
Battery Capacity: ---------- (earphone) 40mAh
---------- (charging box) 300mAh
Resistance: ---------- 32Ω
Rated Power: ---------- 3mW
Driver Unit: ---------- Φ8
Play Time: ---------- 4–5 hours
Standby Time: ----------About 90 hours with charging case
Charging Time: ---------- About 2 hours
Supported Function: ---------- Answer/hang up/calls
---------- pause/play; preevious/next track; wake up Siri
Product Weight: ---------- 4g
Input: ---------- 5V 1A

Product fit

Please choose the most suitable ear tip size for optimal comfort and performance.

Basic operations

Function	Directions	Notification Sound	Indicator
Power on	Long press MFB for 2 seconds.	Voice prompt	Indicators glow solid blue for 2 seconds
Power off	Long press MFB for 2 seconds.	Voice prompt	Indicators glow solid red for 1 seconds
Pair with Bluetooth device	Earbuds will automatically enter pairing mode once powered on. Connect to "MK-X50A" from your Bluetooth device.	Voice prompt – "Pairing mode" "Connected"	Under pairing mode: R side earbuds blinks red & blue Upon successful pairing: L side earbud flashes blue.
Low power prompt		Voice prompt – "Low power"	Indicators blink red once every 5 seconds
Charge the headphones			Charging: Indicators glow solid red. Upon full charge: Indicators turn off.
Clear the headphone pairing list	Press MFB 4 times.	Beep	Indicators blink red and blue three times
Device proficiency test	Under pairing, press MFB 5 times.		Indicators glow solid blue and red

Notes:

Left and right-side earbuds are pre-programmed to be connected to each other once taken out of the charging case.

If both left and right-side earbuds fail to connect to each other, place earbuds back into charging case and take them out again.

If pairing is unsuccessful, repeat pairing operation again.

Function	Directions	Notification Sound	Indicator Lights
Answer a call	Press MFB once.	Beep	/
End a call	Press MFB once.	Beep	/
Reject a call	Hold MFB for 1-2 seconds.	/	/
Incoming call notification	/	Ringtone	Indicator blinks blue twice every 6 seconds
Redial the last number	Double tap MFB for 2 seconds.	/	Indicator blinks blue once every 1.5 seconds
Play/Pause music	Press MFB once.	/	Play music: indicator blinks blue once every 5 seconds Pause music: indicator blinks blue once every 6 minutes
Previous track	Press R side MFB thrice.	Beep	/
Next track	Press L side MFB thrice.	Beep	/
Voice assistant	Hold MFB for 1 second.	Beep	Indicators on two earbuds blink blue once every 6 seconds

Product/ Accessories :

1. Earphones
2. Charging case
3. Silicone ear tips
4. User manual

Troubleshooting

I can't find "MK-X50A" on my Bluetooth's device's list.

1. Make sure "MK-X50A" and your device are within Bluetooth working distance (10m).
2. Remove the earphones from the charging case, enter pairing mode manually.
3. Re-attempt to pair again.

My earbuds can only answer calls/ only listen to songs.

1. Re-start the earbuds. (Power down then power up)
2. Turn off mobile device's Bluetooth and turn it back on.
3. Delete all pairing data within mobile device.
4. Re-attempt to pair again.

There is no sound coming from my earbuds.

1. Please check volume level on both earbuds and connected mobile device.
2. Make sure "MK-X50A" and your device are within Bluetooth working distance (10m).
3. Re-attempt to pair again.

Unstable connection

Make sure "MK-X50A" and your device are within Bluetooth working distance (10m).

Maintenance

Please read the following suggestions to help you comply with the warranty and extend the life of the product.
• Keep the product dry and do not place it in a damp place, so as not to affect the internal circuit of the product. It is necessary to avoid using this product during intense exercise or sweating to prevent sweat from penetrating into the product and damaging the product.
• Do not place the product in a place exposed to the sun or high temperatures. High temperatures can shorten the life of electronic components, damage batteries, and deform some plastic parts.
• Do not place the product in a cold place to avoid damaging the internal circuit board.
• Do not attempt to disassemble the product. If you are not a professional, you may damage the product.
• Do not drop, strongly vibrate, or hit the product with hardware to avoid damaging internal circuits.
• Do not use harsh chemicals or detergents to clean the headphones.
• Do not use sharp objects on the surface of the product to avoid damage to the outer casing and affect the appearance.
If the product does not work properly, please send it to your qualified service facility and the staff will be happy to help you solve the problem.

Warranty

This product is covered under warranty for a period of one year from the date of sale limited to normal use and maintenance of the machine parts, materials and functions.Problems and failures verified upon further identificationwill be provided free repair and replacement parts.

This warranty does not apply:

(a) to a product that is out of warranty;
(b) to damage caused by operating the product outside the permitted or intended usage described.
(c) to a product that has been disassembled, repaired or refitted by any third- parties.
(d) if warranty card and proof of purchase cannot be presented;
(e) to damage caused by earthquake, fire or other external causes, natural disasters, etc.

Note: The warranty does not include product transport costs and does not provide on-site maintenance services

AIWA reserves all rights to clarify this warranty interpretation

WARRANTY FEEDBACK FORM(TICK OFF)

A. No sound
B. Faulty sound
C. Button malfunction
D. Faulty Pairing
E. Recharging problem
F. Others

Buying time

Dealers of sale

Time of problems

User's contact info

Japan est1951

Aiwa Electronics Int'l Co., Ltd.
Explore more at www.int-aiwa.com

Japan est1951

MK-X50A

True Wireless Earphones

Designed in Japan
アイワ株式会社

วิธีการเชื่อมต่อ BT

ระบบบลูทูธสามารถใช้งานได้ภายในระยะทาง 10 เมตร (30 Ft)
* หากมีสิ่งกีดขวางหรืออุปกรณ์เครื่องใช้ไฟฟ้าอื่นอยู่ในบริเวณเดียวกัน อาจลดประสิทธิภาพในการส่งสัญญาณ *

ภาพรวมผลิตภัณฑ์

A. ชาร์จเคส
B. จุกหูฟัง
C. MFB (Multi-Functional Button)
D. หูฟังไร้สาย
E. ไฟบอกสถานะแบตเตอรี่
F. ฝาปิดชาร์จเคส

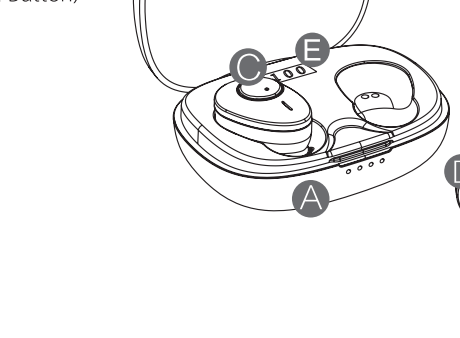

การชาร์จ

1. เชื่อมต่อสายชาร์จเข้ากับชาร์จเคส (5V/300mA)
2. นำหูฟังทั้งสองข้างกลับเข้าไปในชาร์จเคส
3. เสียบสายชาร์จเข้ากับแหล่งพลังงานเพื่อชาร์จไฟ

* ไฟ LED กระพริบเป็นสีแดง (ชาร์จเคส) : กำลังชาร์จ
* ไฟ LED กระพริบเป็นสีแดง (หูฟัง) : กำลังชาร์จ
* ไฟ LED จะดับลงเมื่อการชาร์จเสร็จสมบูรณ์

* คำเตือน: กรุณาติดต่อหน่วยงานกำจัดขยะหรือหน่วยงานรีไซเคิล เพื่อจัดเก็บแบตเตอรี่อย่างเหมาะสม

รายละเอียดทางเทคนิค

BT Version: ---------- V5.0
Transmission Distance: ---------- 10M
Frequency Response: ---------- 20-20KHz
Output Sensitivity: ---------- 95±3dB
MIC Sensitivity: ---------- -42±3dB
Battery Capacity: ---------- (earphone) 40mAh
---------- (charging box) 300mAh
Resistance: ---------- 32Ω
Rated Power: ---------- 3mW
Driver Unit: ---------- Φ8
Play Time: ---------- 4–5 hours
Standby Time: ----------About 90 hours with charging case
Charging Time: ---------- About 2 hours
Supported Function: ---------- Answer/hang up/calls
---------- pause/play; preevious/next track; wake up Siri
Product Weight: ---------- 4g
Input: ---------- 5V 1A

ขนาดเหมาะสมของผลิตภัณฑ์

กรุณาเลือกขนาดของจุกหูฟังที่เหมาะสมกับหูของคุณ
เพื่อความสบายในการสวมใส่และได้รับประสิทธิภาพที่ดีที่สุด

วิธีการใช้งานเบื้องต้น

ฟังก์ชั่น	วิธีทำ	การแจ้งเตือน	การแสดงผล
เปิดเครื่อง	กดค้างที่ MFB 2 วินาที	เสียงแจ้งเตือน	ไฟ LED สีน้ำเงินสว่าง 2 วินาที
ปิดเครื่อง	กดค้างที่ MFB 2 วินาที	เสียงแจ้งเตือน	ไฟ LED สีแดงสว่าง 1 วินาที
เชื่อมต่อ Bluetooth	หูฟังจะเชื่อมต่อโดยอัตโนมัติเมื่อเปิดเครื่อง เลือกเชื่อมต่อ "MK-X50A" บนอุปกรณ์ของคุณ	เสียงแจ้งเตือน "Pairing Mode" "Connected"	หลังจากเชื่อมต่อ: ไฟ LED ที่หูฟังข้างขวากระพริบเป็นสีแดงและสีน้ำเงิน เชื่อมต่อสำเร็จ: ไฟ LED ที่หูฟังข้างซ้ายกระพริบน้ำเงิน
แบตเตอรี่ต่ำ		เสียงแจ้งเตือน "Low Power"	ไฟ LED สีแดงกะพริบทุก 5 วินาที
ชาร์จหูฟัง			ไฟ LED สีแดงจะแสดงระหว่างชาร์จและดับลงเมื่อชาร์จเต็ม
ลบประวัติการเชื่อมต่อของหูฟัง	กดที่ MFB 4 ครั้ง	เสียงปิ๊บ	ไฟ LED สีแดงและสีน้ำเงินสว่าง 3 ครั้ง
ทดสอบคุณภาพ	ระหว่างการเชื่อมต่อ กดที่ MFB 5 ครั้ง		ไฟ LED สว่างเป็นสีแดงและสีน้ำเงิน

หมายเหตุ:

หูฟังข้างซ้าย L และข้างขวา R ถูกตั้งค่าให้เชื่อมต่อคู่กัน เมื่อดึงออกมาจากกล่องชาร์จ
ในกรณีที่หูฟังข้างใดข้างหนึ่งเชื่อมต่อผิดพลาด
ให้นำหูฟังเก็บเข้าชาร์จเคสจากนั้นจึงนำออกมาใช้งานอีกครั้ง

ในกรณีเชื่อมต่อไม่สำเร็จ ให้ลองเชื่อมต่อใหม่อีกครั้ง

ฟังก์ชั่น	วิธีทำ	เสียงแจ้งเตือน	ไฟแสดงผล
รับสาย	กด MFB 1 ครั้ง	เสียงปิ๊บ	
วางสาย	กด MFB 1 ครั้ง	เสียงปิ๊บ	
ปฏิเสธสาย	กดค้างที่ MFB 1-2 วินาที		
การแจ้งเตือนสายเข้า		เสียงริงโทน	ไฟสีน้ำเงินกะพริบ 2 ครั้ง ทุก 6 วินาที
โทรซ้ำเบอร์ล่าสุด	กด MFB 2 ครั้ง		ไฟสีน้ำเงิน กะพริบ ทุก 1.5 วินาที
เล่น / หยุด เพลง	กด MFB 1 ครั้ง		เล่นเพลง: ไฟสีน้ำเงิน กะพริบ ทุก 5 วินาที หยุดเพลง: ไฟสีน้ำเงิน กะพริบ ทุก 6 นาที
เพลงก่อนหน้า	กด MFB ข้างขวา 3 ครั้ง	เสียงปิ๊บ	
เพลงถัดไป	กด MFB ข้างซ้าย 3 ครั้ง	เสียงปิ๊บ	
Voice Assistant	กด MFB ค้าง 1 วินาที	เสียงปิ๊บ	ไฟสีน้ำเงิน กะพริบ ทุก 6 วินาที

ผลิตภัณฑ์ / อุปกรณ์เสริม:

1. หูฟังไร้สาย
2. ชาร์จเคส
3. จุกหูฟัง
4. คู่มือการใช้งาน

การแก้ไขปัญหา

ไม่พบสัญญาณ "MK-X50A" ในหน้า Bluetooth
- ตรวจสอบให้แน่ใจว่าหูฟังและมือถือของคุณอยู่ใกล้กันภายในระยะทาง 10 เมตร
- นำหูฟังออกมาจากชาร์จเคสเพื่อเข้าสู่โหมดเชื่อมต่อ Bluetooth

หูฟังสามารถรับสายโทรเข้าหรือฟังเพลงได้เพียงอย่างเดียว
- ปิดและเปิดหูฟังอีกครั้ง
- ปิดระบบ Bluetooth บนมือถือและเชื่อมต่อใหม่ภายหลัง
- ลบข้อมูลการจับคู่อุปกรณ์ออกจากมือถือ จากนั้นทำการเชื่อมต่อใหม่อีกครั้ง

ไม่มีเสียงออกมาจากหูฟัง
- ตรวจสอบว่าหูฟังได้เปิดเสียงและเชื่อมต่อกับมือถือแล้วหรือไม่
- ตรวจสอบให้แน่ใจว่าหูฟังและมือถือของคุณอยู่ใกล้กันภายในระยะทาง 10 เมตร
- เชื่อมต่ออุปกรณ์เข้ากับมือถือใหม่อีกครั้ง

การเชื่อมต่อไม่เสถียร
- ตรวจสอบให้แน่ใจว่าหูฟังและมือถือของคุณอยู่ใกล้กันภายในระยะทาง 10 เมตร

ข้อควรระวัง

กรุณาอ่านคำแนะนำดังต่อไปนี้
เพื่อรับทราบเงื่อนไขการรับประกันสินค้าและยืดอายุการใช้งานของผลิตภัณฑ์นี้
- ไม่ควรทำให้ผลิตภัณฑ์เปียกและหลีกเลี่ยงการวางไว้ในบริเวณที่มีความชื้น
- หลีกเลี่ยงการวางผลิตภัณฑ์ไว้ในที่ที่โดนแสงแดดและอุณหภูมิสูง
อุณหภูมิสูงจะลดอายุการใช้งานของอุปกรณ์ไฟฟ้า

แบตเตอรี่และหลอมละลายชิ้นส่วนพลาสติกบางส่วน
- หลีกเลี่ยงการวางผลิตภัณฑ์ไว้ในที่เย็นจัดเพื่อป้องกันความเสียหายกับวงจรภายในผลิตภัณฑ์
- หากคุณไม่ใช่ผู้เชี่ยวชาญ ห้ามทำการประกอบชิ้นส่วนใดๆในผลิตภัณฑ์นี้ด้วยตนเอง

เนื่องจากจะทำให้เกิดความเสียหายได้
- หลีกเลี่ยงการทำตก การเขย่าอย่างรุนแรง

และการทุบผลิตภัณฑ์ด้วยของแข็งเพื่อป้องกันความเสียหายกับวงจรภายในผลิตภัณฑ์
- ห้ามใช้สารเคมีหรือสารซักฟอกทำความสะอาดหูฟัง
- ห้ามขูดหรือถูพื้นผิวของเครื่องด้วยวัตถุมีคม
หากผลิตภัณฑ์นี้ทำงานไม่เสถียร กรุณาติดต่อฝ่ายบริการลูกค้า

เงื่อนไขการรับประกัน

ผลิตภัณฑ์นี้มีระยะเวลาการรับประกัน 1 ปี นับจากวันที่สั่งซื้อ

การรับประกันสินค้าจะไม่ครอบคลุมในกรณีดังต่อไปนี้

1. สินค้าหมดประกัน
2. ความเสียหายหรือชำรุดที่เกิดจากการใช้งานไม่ถูกวิธี การดูแลรักษาที่ไม่เหมาะสม หรือใช้ต่อกับอุปกรณ์อื่นๆ ที่มีคุณสมบัติไม่ตรงตามที่ระบุไว้ในคู่มือการใช้งาน
3. ความเสียหายที่เกิดจากการแก้ไขหรือซ่อมแซมสินค้าโดยบุคคลอื่น
4. ไม่มีใบรับประกันสินค้าหรือหลักฐานการซื้อ
5. ความเสียหายที่เกิดจากภัยธรรมชาติ ประกายไฟ ความเสียหายภายนอก เช่น ตกกระแทก รอยถลอก รอยขีดข่วน และอื่นๆ เป็นต้น

หมายเหตุ:

ประกันสินค้าไม่ครอบคลุมถึงค่าขนส่งสินค้าและค่าบริการบำรุงรักษาสินค้า
ลูกค้าจะต้องเป็นผู้รับผิดชอบด้วยตนเองทั้งหมด

Japan est1951

Aiwa Electronics Int'l Co., Ltd.
Explore more at www.int-aiwa.com